

# EKM36-OKF0B0S02 EKS/EKM36

**MOTOR FEEDBACK SYSTEMS** 



MOTOR FEEDBACK SYSTEMS



#### Ordering information

| Туре            | Part no. |
|-----------------|----------|
| EKM36-0KF0B0S02 | 1084837  |

M3 mounting screws for stator coupling not included with delivery.

Other models and accessories → www.sick.com/EKS\_EKM36

Illustration may differ



#### Detailed technical data

#### Features

| Special device  | ✓  |
|---|--|
| Standard reference device                                 | EKM36-0KF0B018A, 1084233   |
| Items supplied  | M3 mounting screws for stator coupling not included with delivery. |
| Safety-related parameters                                 |  |
| $\text{MTTF}_{\text{D}}$ (mean time to dangerous failure) | 155 years (EN ISO 13849) <sup>1)</sup>                             |

<sup>1)</sup> This product is a standard product and does not constitute a safety component as defined in the Machinery Directive. Calculation based on nominal load of components, average ambient temperature 60°C, frequency of use 8760 h/a. All electronic failures are considered hazardous. For more information, see document no. 8015532.

#### Performance

| Position   |   |
|--|---|
| Resolution per revolution                        | 17 bit  |
| System accuracy                                  | ± 120 ″   |
| Signal noise (ơ)                                 | $\pm$ 5 $^{\prime\prime}$ (See "signal noise" and "attenuation" diagrams) |
| Number of the absolute ascertainable revolutions | 4,096   |
| Available memory area                            | 8,192 Byte  |
| Measurement step per revolution                  | 131,072   |
| Measurement principle                            | Optical   |

#### Interfaces

| Type of code for the absolute value              | Binary  |
|--|---|
| Code sequence                                    | Increasing, when turning the shaft For clockwise rotation, looking in direction "A" (see dimensional drawing) |
| Communication interface                          | HIPERFACE DSL <sup>®</sup>  |
| Initialization time                              | Max. 500 ms <sup>1)</sup>   |
| Measurement external temperature resis-<br>tance | 32 bit value, without prefix (1 Ω) 0 209.600 Ω<br>At -40 °C +160 °C: NTC +-2K; PTC+-3K                        |

<sup>1)</sup> From reaching a permitted operating voltage.

MOTOR FEEDBACK SYSTEMS

#### Electrical data

| Connection type                                     | Male connector, 4-pin   |
|---|---|
| Supply voltage                                      | 7 V 12 V  |
| Warm-up time voltage ramp                           | Max. 180 ms <sup>1)</sup>                                     |
| Recommended supply voltage                          | 8 V   |
| Current consumption                                 | $\leq$ 150 mA (See current consumption diagram) <sup>2)</sup> |
| Output frequency for the digital positionval-<br>ue | 0 kHz 75 kHz  |

 $^{\rm (1)}$  Duration of voltage ramp between 0 and 7.0 V.

<sup>2)</sup> Current rating applies when using interface circuit suggestions as shown in HIPERFACE DSL ® manual (8017595).

#### Mechanical data

| Shaft version                               | Tapered shaft   |  |  |
|---|---|--|--|
| Flange type / stator coupling               | Stator coupling   |  |  |
| Dimensions                                  | See dimensional drawing   |  |  |
| Weight                                      | 0.1 kg  |  |  |
| Moment of inertia of the rotor              | 4.5 gcm <sup>2</sup>  |  |  |
| Operating speed                             | ≤ 9,000 min <sup>-1</sup>   |  |  |
| Angular acceleration                        | ≤ 500,000 rad/s²  |  |  |
| Operating torque                            | 0.2 Ncm   |  |  |
| Start up torque                             | 0.3 Ncm   |  |  |
| Permissible movement static                 | ± 0.1 mm, ± 0.5 mm radial, axial  |  |  |
| Permissible movement dynamic                | ± 0.05 mm radial<br>± 0.1 mm axial  |  |  |
| Life of ball bearings                       | 3.6 x 10^9 revolutions  |  |  |
| Ambient data                                |   |  |  |
| Operating temperature range                 | -20 °C +115 °C <sup>1)</sup>  |  |  |
| Storage temperature range                   | -40 °C +125 °C <sup>2)</sup>  |  |  |
| Relative humidity/condensation              | 90 %, Condensation not permitted  |  |  |
| Resistance to shocks                        | 100 g, 6 ms (according to EN 60068-2-27)  |  |  |
| Frequency range of resistance to vibrations | 50 g, 10 Hz 2,000 Hz (EN 60068-2-6)   |  |  |
| EMC   | According to EN 61000-6-2, EN 61000-6-4 and IEC 61326-3 $^{\rm 3)}$             |  |  |
| Enclosure rating                            | IP40, with mating connector inserted and closed cover (IEC 60529-1) $^{\rm 4)}$ |  |  |

<sup>1)</sup> Given typical thermal connection between motor flange and encoder stator coupling. The max. internal sensor temperature may not exceed 125 °C.

<sup>2)</sup> Without package.

<sup>3)</sup> The EMC according to the standards quoted is achieved when the motor feedback system is mounted in an electrically conductive housing, which is connected to the central earthing point of the motor controller via a cable screen. The GND-(0 V) connection of the supply voltage is also grounded here. If other shielding concepts are used, users must perform their own tests.

 $^{\rm 4)}$  With mating connector inserted and closed cover.


#### Classifications

| ECLASS 5.0   | 27270590 |
|--------------|----------|
| ECLASS 5.1.4 | 27270590 |
| ECLASS 6.0   | 27270590 |
| ECLASS 6.2   | 27270590 |

MOTOR FEEDBACK SYSTEMS

| ECLASS 7.0     | 27270590 |
|----------------|----------|
| ECLASS 8.0     | 27270590 |
| ECLASS 8.1     | 27270590 |
| ECLASS 9.0     | 27270590 |
| ECLASS 10.0    | 27273805 |
| ECLASS 11.0    | 27273901 |
| ECLASS 12.0    | 27273901 |
| ETIM 5.0       | EC001486 |
| ETIM 6.0       | EC001486 |
| ETIM 7.0       | EC001486 |
| ETIM 8.0       | EC001486 |
| UNSPSC 16.0901 | 41112113 |

#### Attachment specifications

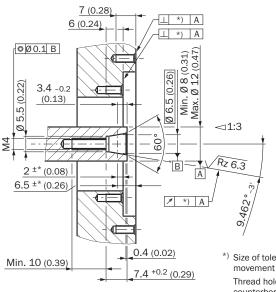

\*) Size of tolerance reduce the allowed movement of the shaft, see data sheet. Thread holes according DIN 13 with counterbore according DIN 76 min. 1.05 x diameter of thread.

① Nominal position

② The size of the tolerance reduces the permissible wave movement, see data sheet

③ Threaded holes in accordance with DIN 13 with recesses in accordance with DIN 76 min. 1.05 x thread diameter

#### **PIN** assignment


Temperature sensor pin assignment

| $\bigcirc \bigcirc \bigcirc$ |        |                       |
|------------------------------|--------|-----------------------|
| 2 1                          |        |                       |
| PIN                          | Signal | Explanation           |
| 1                            | T+     | Thermistor connection |

MOTOR FEEDBACK SYSTEMS


| PIN  | Signal | Explanation                       |
|--|--------|-----------------------------------|
| 2  | T-     | Thermistor connection (to ground) |
| Recommended outer diameter of set of stranded wires: 2.2 mm $\pm$ 0.1 mm |        |                                   |
| Recommended mating connector: Harwin M80-8990205                         |        |                                   |

### Diagrams

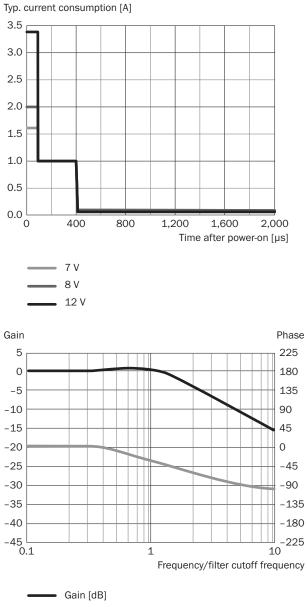

Phase [°]

MOTOR FEEDBACK SYSTEMS

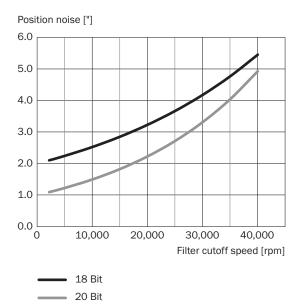

Signal noise is measured as 1 standard deviation ( $\sigma$ ) of the value distribution. Position filter cutoff speed is set by ressource 10Ah, see page 11.

### Adjustments

Supported resources for HIPERFACE DSL®

| RID            | Name     | time overrun [ms] | Description  |
|----------------|----------|-------------------|--|
| 0x000          | ROOT     | 75                | Top node of ressource tree (all nodes reachable from here)                           |
| 0x001          | IDENT    | 75                | Node with pointers to all identification ressources                                  |
| 0x002          | MONITOR  | 75                | Node with pointers to all monitoring ressources                                      |
| 0x003          | ADMIN    | 75                | Node with pointers to all administration ressources                                  |
| 0x004          | COUNTER  | 75                | Node with pointers to all counter ressources   |
| 0x005          | DATA     | 75                | Node with pointers to all user file ressources                                       |
| 0x006          | SENSHUB  | 75                | Node with pointers to all SensorHub ressources                                       |
| 0x080          | ENCTYPE  | 255               | Base functionality of encoder  |
| 0x081          | RESOLUTN | 255               | Number of steps per turn   |
| 0x082          | RANGE    | 255               | Number of encoded revolutions  |
| 0x083          | TYPECODE | 255               | Type name of encoder   |
| 0x084          | SERIALNO | 255               | Serial no of encoder   |
| 0x085          | FWREVNO  | 70                | Firmware and hardware revision of encoder  |
| 0x086          | FWDATE   | 70                | Firmware date of encoder   |
| 0x087          | EESIZE   | 255               | Total amount of memory for user files  |
| 0x089          | VPOS2RES | 255               | Number of steps per turn (DSL Safe Position 2)                                       |
| 0x0c0          | TEMPRNG  | 255               | Min and max allowed ambient temperature of encoder                                   |
| 0x0c1          | TEMPRTUR | 70                | Actual ambient temperature of encoder  |
| 0x0c2          | LEDRANGE | 255               | Min and max allowed LED current of encoder   |
| 0x0c3          | LEDCURR  | 70                | Actual LED current of encoder  |
| 0x0c4          | SUPRANGE | 255               | Min and max allowed supply voltage of encoder  |
| 0x0c5          | SUPVOLT  | 70                | Actual supply voltage of encoder   |
| 0x0c6          | SPEEDRNG | 255               | Max allowed shaft speed of encoder   |
| 0x0c7          | SPEED    | 70                | Actual shaft speed of encoder  |
| 0x0c8          | ACCRANGE | 255               | Max allowed shaft acceleration of encoder  |
|                |          |                   | Operating time and total shaft turns of encoder. For safety variants                 |
| 0x0cb          | LIFETIME | 70                | also remaining mission time is indicated.  |
| 0x0cc          | ERRORLOG | 195               | Stored error messages of encoder   |
| 0x0cd          | HISTOGRM | 70                | Usage history of encoder in histogram form   |
| 0x0d5          | ERRLOGFI | 255               | Filters the error log entries  |
| 0x100          | RESET    | 255               | Reset or shutdown of encoder   |
| 0x101          | SETPOS   | 255               | Set encoder position to arbitrary preset value. Offset of position can be read back. |
| 0x104          | SETACCES | 70                | Set or read back access level  |
| 0x105          | CHNGEKEY | 255               | Change password for access level   |
| 0x102          | UWARNING | 255               | Set or read back user-defined warning boundaries                                     |
| 0x108          | FACRESET | 255               | Reset user settings of encoder to factory defaults                                   |
| 0x109          | ENCIDENT | 255               | Set or read back user-defined encoder index (for multi-axis<br>systems)              |
| 0x10a          | POSFILT  | 255               | Set or read back position filter settings  |
| 0x10a          | LOCKINTU | 255               | Possibility to lock/unlock internal access levels                                    |
| 0x112          | FEATURES | 90                | Set or read back encoder features  |
| 0x11f          | BOOTLOAD | 255               | Bootloader access for end user (planned)   |
| 0x120          | READCNT  | 140               | Read user counter value  |
| 0x120          | INCCOUNT | 140               | Increment user counter value   |
| 0x121          | RESETCNT | 140               | Reset user counter value   |
| 0x122<br>0x130 | LOADFILE | 255               | Load user file   |
| 0x130          | RWFILE   | 255               | Read from or write to user file  |
| 0x131          | FILESTAT | 70                | Read status of user file   |
| 0x132          | MAKEFILE | 255               | Create, change or delete user file   |
| 0x133          | DIR      | 130               | Read directory of accessible user files  |
| 0x134          | FILEBACK | 255               | Set or read back status of user file backup  |
| 0x200          | ACCESSIO | 70                | Access to simple I/Os connected directly to encoder                                  |
| 0x201          | MANAGEIO | 255               | Manage simple I/Os   |
|                |          |                   |  |

MOTOR FEEDBACK SYSTEMS

#### **Operation note**

Overview of warnings and fault indications

| 00h         0         A Protocol reset was executed           00h         1         Acceleration overflow, invalid position           00h         2         Test running           00h         4         Internal error in angular tracking, invalid p | oosition          |
|--|-------------------|
| Position 00h 2 Test running 00h 4 Internal error in angular tracking invalid n   | oosition          |
| Position 00h 4 Internal error in angular tracking invalid n  |                   |
| 00h 4 Internal error in angular tracking invalid n   |                   |
| (incremental)  | sition            |
| 00h 5 Internal error in vector length, invalid po  |                   |
| 00h 6 Internal error in position counter, invalid p  | position          |
| 00h 7 Internal error in position synchronization, inva   | alid position     |
| 01h 0 Error in absolute position in rotation   | n                 |
| Position 01h 1 Error 1 in absolute position in several rot   | ations            |
| (absolute) 01h 2 Error 2 in absolute position in several rot   | ations            |
| 01h 3 Error 3 in absolute position in several rot  | ations            |
| 01h 4 Position cross check error (only safety ver  | rsions)           |
| 02h 0 Switch-on self-test undertaken (only safety v  | versions)         |
| 02h 1 Warning safety parameter: error could not be rective versions)   | fied (only safety |
| O2h     2     Warning safety parameter: error could not be rective versions)   | fied (only safety |
| 02h 3 Error calibration data   |                   |
| 02h 4 Internal communications error 1  |                   |
| 02h 5 Internal communications error 2  |                   |
| 02h 6 Internal general error   |                   |
| 03h 0 Critical temperature   |                   |
| 03h 1 Critical LED current   |                   |
| 03h 2 Critical supply voltage  |                   |
| Test 03h 3 Critical rotation speed   |                   |
| 03h 4 Critical acceleration  |                   |
| 03h 5 Critical overflow  |                   |
| 03h 6 Internal monitoring error  |                   |
| 04h 0 Invalid argument given during resource access  | s procedure       |
| Access to 04h 1 Resource access refused due to incorrect acc   | cess level        |
| resources 04h 2 Internal error during resoure access   | 5                 |
| 04h 3 Error when accessing a user file   |                   |
| 07h 0 User-defined warning 0   |                   |
| User defined 07h 1 User-defined warning 1  |                   |
| Warnings07h2User-defined warning 2   |                   |
| 07h 3 User-defined warning 3   |                   |

Supported access levels

8

| Access level | User                      | Standard access key |
|--------------|---------------------------|---------------------|
| 0            | Execute (default setting) | 0000 (30 30 30 30h) |
| 1            | Bediener                  | 1111 (31 31 31 31h) |
| 2            | Wartung                   | 2222 (32 32 32 32h) |
| 3            | Berechtigter Client       | 3333 (33 33 33 33h) |
| 4            | Benutzerservice           | 4444 (34 34 34 34h) |

MOTOR FEEDBACK SYSTEMS

#### **Recommended accessories**

Other models and accessories → www.sick.com/EKS\_EKM36

|                         | Brief description   | Туре             | Part no. |
|-------------------------|---|------------------|----------|
| Other mountir           | ng accessories  |                  |          |
|                         | Mounting tools  | BEF-MW-EKX36     | 2060224  |
| Others                  |   |                  |          |
|                         | <ul> <li>Connection type head A: Female connector, stranded wire, 2-pin, straight</li> <li>Connection type head B: Flying leads</li> <li>Signal type: HIPERFACE DSL<sup>®</sup></li> <li>Cable: 0.2 m, 2-wire</li> <li>Description: HIPERFACE DSL<sup>®</sup>, twisted, unshielded</li> </ul> | DOL-0B02-GOM2XC1 | 2062083  |
|                         |   | DOL-0B02-G0M4XC1 | 2086286  |
| $\langle \cdot \rangle$ |   | DOL-0B03-G0M4XC1 | 2087314  |
|                         |   | DOL-0B02-G0M3XC1 | 2091818  |
|                         |   | DOL-0B02-G0M3AC2 | 2108944  |

## SICK AT A GLANCE

SICK is one of the leading manufacturers of intelligent sensors and sensor solutions for industrial applications. A unique range of products and services creates the perfect basis for controlling processes securely and efficiently, protecting individuals from accidents and preventing damage to the environment.

We have extensive experience in a wide range of industries and understand their processes and requirements. With intelligent sensors, we can deliver exactly what our customers need. In application centers in Europe, Asia and North America, system solutions are tested and optimized in accordance with customer specifications. All this makes us a reliable supplier and development partner.

Comprehensive services complete our offering: SICK LifeTime Services provide support throughout the machine life cycle and ensure safety and productivity.

For us, that is "Sensor Intelligence."

## WORLDWIDE PRESENCE:

Contacts and other locations -www.sick.com



Online data sheet

