
5794705380

# **AVENTICS Series 490/579/589 Directional Control Valves**

The AVENTICS Series 490/579/589 have a robust polymer housing that can be mounted individually or as a block. They cover a large range of voltages and feature fast connections for pneumatic tubing.





#### Technical data

Industry Industrial
Activation Electrically
Valve type Poppet valve

Switching principle 5/2, with spring return

Sealing principle Soft seal

Connection type Pipe connection

Manual override with detent

Compressed air connection input  $\emptyset$  1/4" Compressed air connection output  $\emptyset$  1/4"

Min. working pressure 2 bar Max. working pressure 8 bar

Protection class with connection IP65

Reverse polarity protection Protected against polarity reversal

Operational voltage 230 V AC
Operational voltage AC at 50 Hz 230 V

## 5/2-directional valve, Series 579

2023-11-02

5794705380

Operational voltage AC at 60 Hz 230 V

Voltage tolerance AC 60 Hz -10% / +15%

Pilot Internal
Coil width 20 mm
Holding power AC 50 Hz 2.3 VA
Holding power AC 60 Hz 2 VA
Switch-on power AC 50 Hz 3.2 VA
Switch-on power AC 60 Hz 2.8 VA

Duty cycle 100 %
Typ. switch-on time 27 ms
Typ. switch-off time 28 ms

Blocking principle

Min. ambient temperature

Max. ambient temperature

50 °C

Min. medium temperature

-15 °C

Max. medium temperature

50 °C

Medium Compressed air

Min. oil content of compressed air 0 mg/m³ Max. oil content of compressed air 1 mg/m³ Max. particle size 5  $\mu$ m

Weight 0.133 kg

#### Material

Housing material Polyamide

Polyurethane

Part No. 5794705380

5794705380

#### Technical information

At an ambient temperature of [[40] °C] the max. working pressure is [[10] bar].

Versions with voltage of less than 50 V DC do not have a protective ground.


The min. control pressure must be adhered to, since otherwise faulty switching and valve failure may result!

The pressure dew point must be at least 15 °C less than ambient and medium temperature and may not exceed 3 °C.

The oil content of compressed air must remain constant during the life cycle.

Use only the approved oils from AVENTICS. Further information can be found in the "Technical information" document (available in https://www.emerson.com/en-us/support).

### **Dimensions**

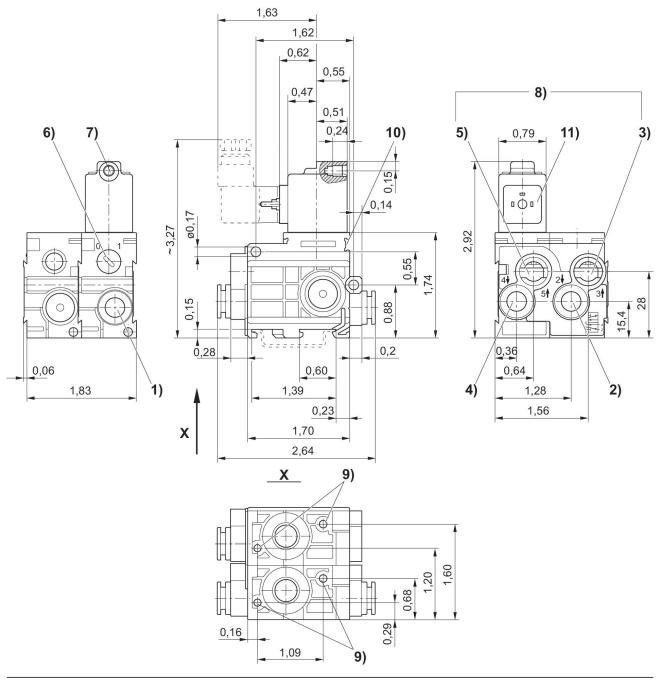

1) port 1 2) port 2 3) port 3 4) port 4 5) port 5 6) manual override 7) core Ø for M 5 8) exhaust air must not be throttled 9) pocket hole 6 mm deep for 3.5 self-tapping screw 10) mounting space for name plate 11) coil can be rotated at 180° intervals