
5/2-directional valve, Series 581, size 4

5814293530

ISO 5599-1, size 4, series 581

■ Qn = 5000 ... 6000 l/min



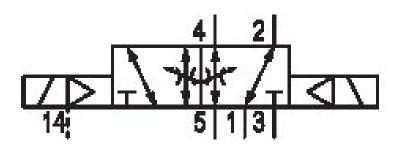

Technical data

Industry

Industrial

Activation

Electrically

Nominal flow Qn

6000 I/min

Switching principle

5/2

Compressed air connection output

Base plate ISO 5599-1

Working pressure min.

-0.95 bar

Working pressure max

16 bar

DC operating voltage

24 V

Voltage tolerance DC

-10% / +10%

Voltage tolerance AC 50 Hz

-10% / +10%

Manual override

without

Electrical connection type

Plug

Electrical connection size

EN 175301-803, form A

Actuating control

Double Solenoid



Sealing principle

Soft Seal Pilot External Standards ISO 5599-1

Pilot valve width 30x22 mm CNOMO

Valve type Spool valve

Blocking principle
Single base plate principle

Connection type Plate connection

Compressed air connection input

Base plate ISO 5599-1

Compressed air connection, exhaust

Base plate ISO 5599-1

Compressed air connection pilot exhaust

M5

Power consumption DC

6.7 W

Flow conductance C

24.5 l/(s*bar)
Throttle
with throttle
Frame size
ISO 4

Control pressure min.

1.5 bar

Control pressure max.

16 bar

Min. ambient temperature

-15 °C

Max. ambient temperature

50 °C

Min. medium temperature

-15 °C

Max. medium temperature

50 °C Medium

Compressed air

Max. particle size

50 µm

Oil content of compressed air min.

0 mg/m³

Oil content of compressed air max.

5 mg/m³

Protection class with connection

IP65

Duty cycle 100 %

Typ. switch-on time

21 ms

Typ. switch-off time

21 ms

mounting screws with hexagon socket

Mounting screw tightening torque

10 Nm Weight 1.57 kg

Housing material

Aluminum

Seal material

Acrylonitrile butadiene rubber

Part No. 5814293530

Technical information

The min. control pressure must be adhered to, since otherwise faulty switching and valve failure may result!

The pressure dew point must be at least 15 °C under ambient and medium temperature and may not exceed 3 °C .

The oil content of compressed air must remain constant during the life cycle.

Use only the approved oils from AVENTICS. Further information can be found in the "Technical information" document (available in https://www.emerson.com/en-us/support).



Dimensions

