

## 5/2-directional valve, Series 581, size 2

5812170190

ISO 5599-1, size 2, series 581

■ Qn = 2100 ... 2700 l/min

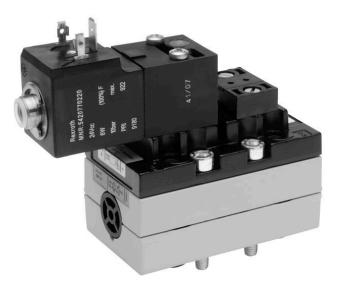



## Technical data

Industry Industrial

Activation Electrically

Nominal flow Qn

2700 l/min

Switching principle

5/2

Compressed air connection output

Base plate ISO 5599-1 Working pressure min.

3 bar

Working pressure max

10 bar

DC operating voltage

24 V

Voltage tolerance DC

-10% / +10%

Manual override without detent

Electrical connection type

Plug

Electrical connection size

EN 175301-803, form A

Actuating control Single Solenoid

Sealing principle

Soft Seal

Pilot Internal

Standards

ISO 5599-1 Pilot valve width

30x30 mm CNOMO

Valve type Spool valve

Blocking principle Single base plate principle

Connection type

Plate connection

Return

With spring return

Compressed air connection input

Base plate ISO 5599-1



Compressed air connection, exhaust

Base plate ISO 5599-1

Compressed air connection pilot exhaust

G 1/8

Power consumption DC

6 W

Flow conductance C

10.8 l/(s\*bar)

Frame size

ISO 2

Control pressure min.

3 bar

Control pressure max.

10 bar

Min. ambient temperature

-15 °C

Max. ambient temperature

50 °C

Min. medium temperature

-15 °C

Max. medium temperature

50 °C

Medium Compressed air

Max. particle size

50 µm

Oil content of compressed air min.

0 mg/m<sup>3</sup>

Oil content of compressed air max.

5 mg/m<sup>3</sup>

Protection class with connection

IP65

Duty cycle

100 %

Typ. switch-on time

17 ms

Typ. switch-off time

40 ms

mounting screws

with hexagon socket

Mounting screw tightening torque

3.5 Nm Weight

0.6 kg

Housing material

Aluminum

Seal material

Acrylonitrile butadiene rubber

Part No. 5812170190

## Technical information

The min. control pressure must be adhered to, since otherwise faulty switching and valve failure may result!

The pressure dew point must be at least 15  $^{\circ}$ C under ambient and medium temperature and may not exceed 3  $^{\circ}$ C .

The oil content of compressed air must remain constant during the life cycle.

Use only the approved oils from AVENTICS. Further information can be found in the "Technical information" document (available in https://www.emerson.com/en-us/support).



## **Dimensions**

