
## 5/3-directional valve, Series 581, size 4

5814491440

ISO 5599-1, size 4, series 581

■ Qn = 5000 ... 6000 l/min



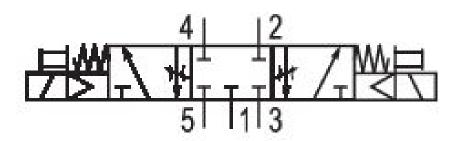

## Technical data

Industry

Industrial

Activation

Electrically

Nominal flow Qn

5000 I/min

Switching principle

5/3

Version

**Closed Center** 

Compressed air connection output

Base plate ISO 5599-1

Working pressure min.

3 bar

Working pressure max

16 bar

Operational voltage AC at 50 Hz

230 V

Voltage tolerance AC 50 Hz

-10% / +10%

Manual override

without detent

Electrical connection type

Plug

Electrical connection size

EN 175301-803, form A

Sealing principle

Soft Seal



Pilot Internal Standards ISO 5599-1

Pilot valve width 30x22 mm CNOMO

Valve type Spool valve

Blocking principle Single base plate principle

Connection type Plate connection

Compressed air connection input

Base plate ISO 5599-1

Compressed air connection, exhaust

Base plate ISO 5599-1

Compressed air connection pilot exhaust

М5

Holding power AC 50 Hz

10.8 VA

Switch-on power AC 50 Hz

15.2 VA

Flow conductance C

15.5 l/(s\*bar)
Throttle
with throttle
Frame size
ISO 4

Control pressure min.

3 bar

Control pressure max.

16 bar

Min. ambient temperature

-15 °C

Max. ambient temperature

50 °C

Min. medium temperature

-15 °C

Max. medium temperature

50 °C Medium Compressed air

Max. particle size

50 µm

Oil content of compressed air min.

0 mg/m<sup>3</sup>

Oil content of compressed air max.

5 mg/m<sup>3</sup>

Protection class with connection

**IP65** 

Duty cycle 100 %

Typ. switch-on time

26 ms

Typ. switch-off time

68 ms

mounting screws with hexagon socket

Mounting screw tightening torque

10 Nm Weight 1.57 kg

Housing material

Aluminum

Seal material

Acrylonitrile butadiene rubber

Part No. 5814491440

## Technical information

The min. control pressure must be adhered to, since otherwise faulty switching and valve failure may result!

The pressure dew point must be at least 15 °C under ambient and medium temperature and may not exceed 3 °C .

The oil content of compressed air must remain constant during the life cycle.

Use only the approved oils from AVENTICS. Further information can be found in the "Technical information" document (available in https://www.emerson.com/en-us/support).



## **Dimensions**

